 
 
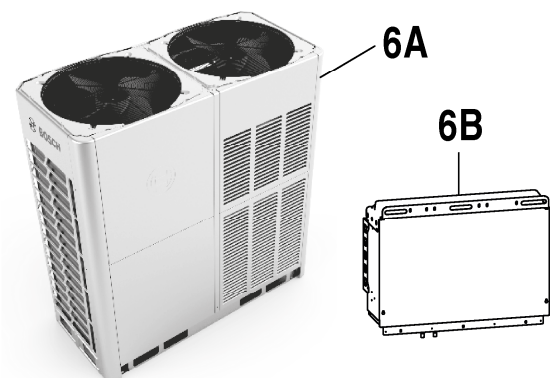 
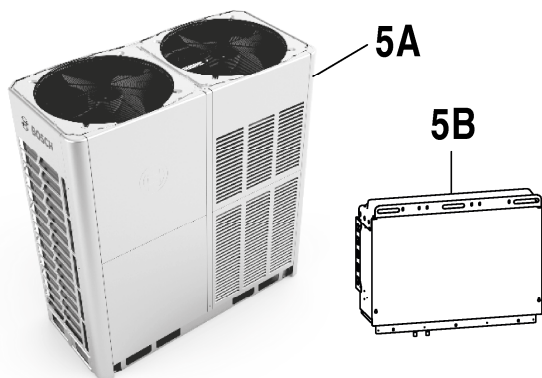 
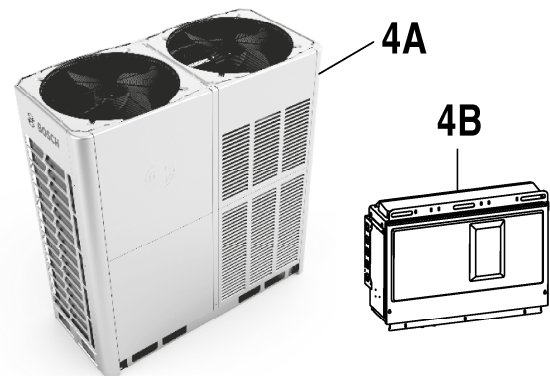 
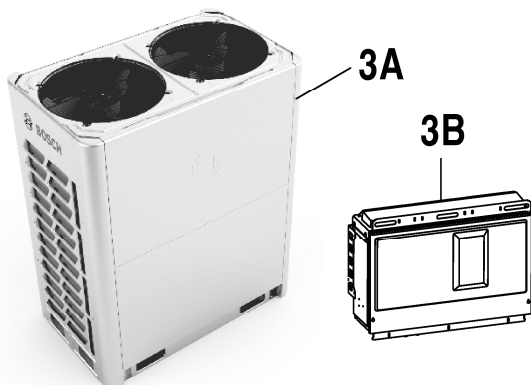 


AF5300A 25-90

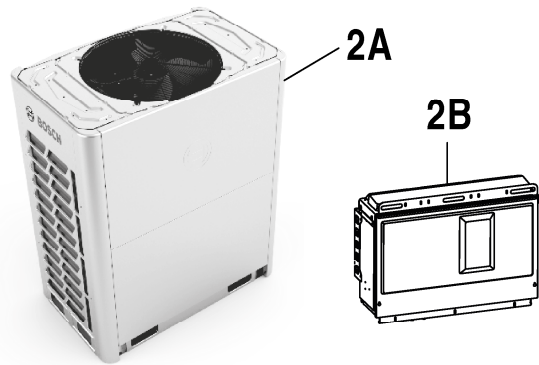 


8738894880.aa.RO

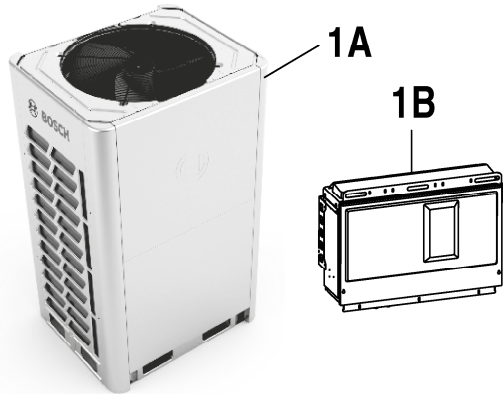

BOSCH

Spare parts list

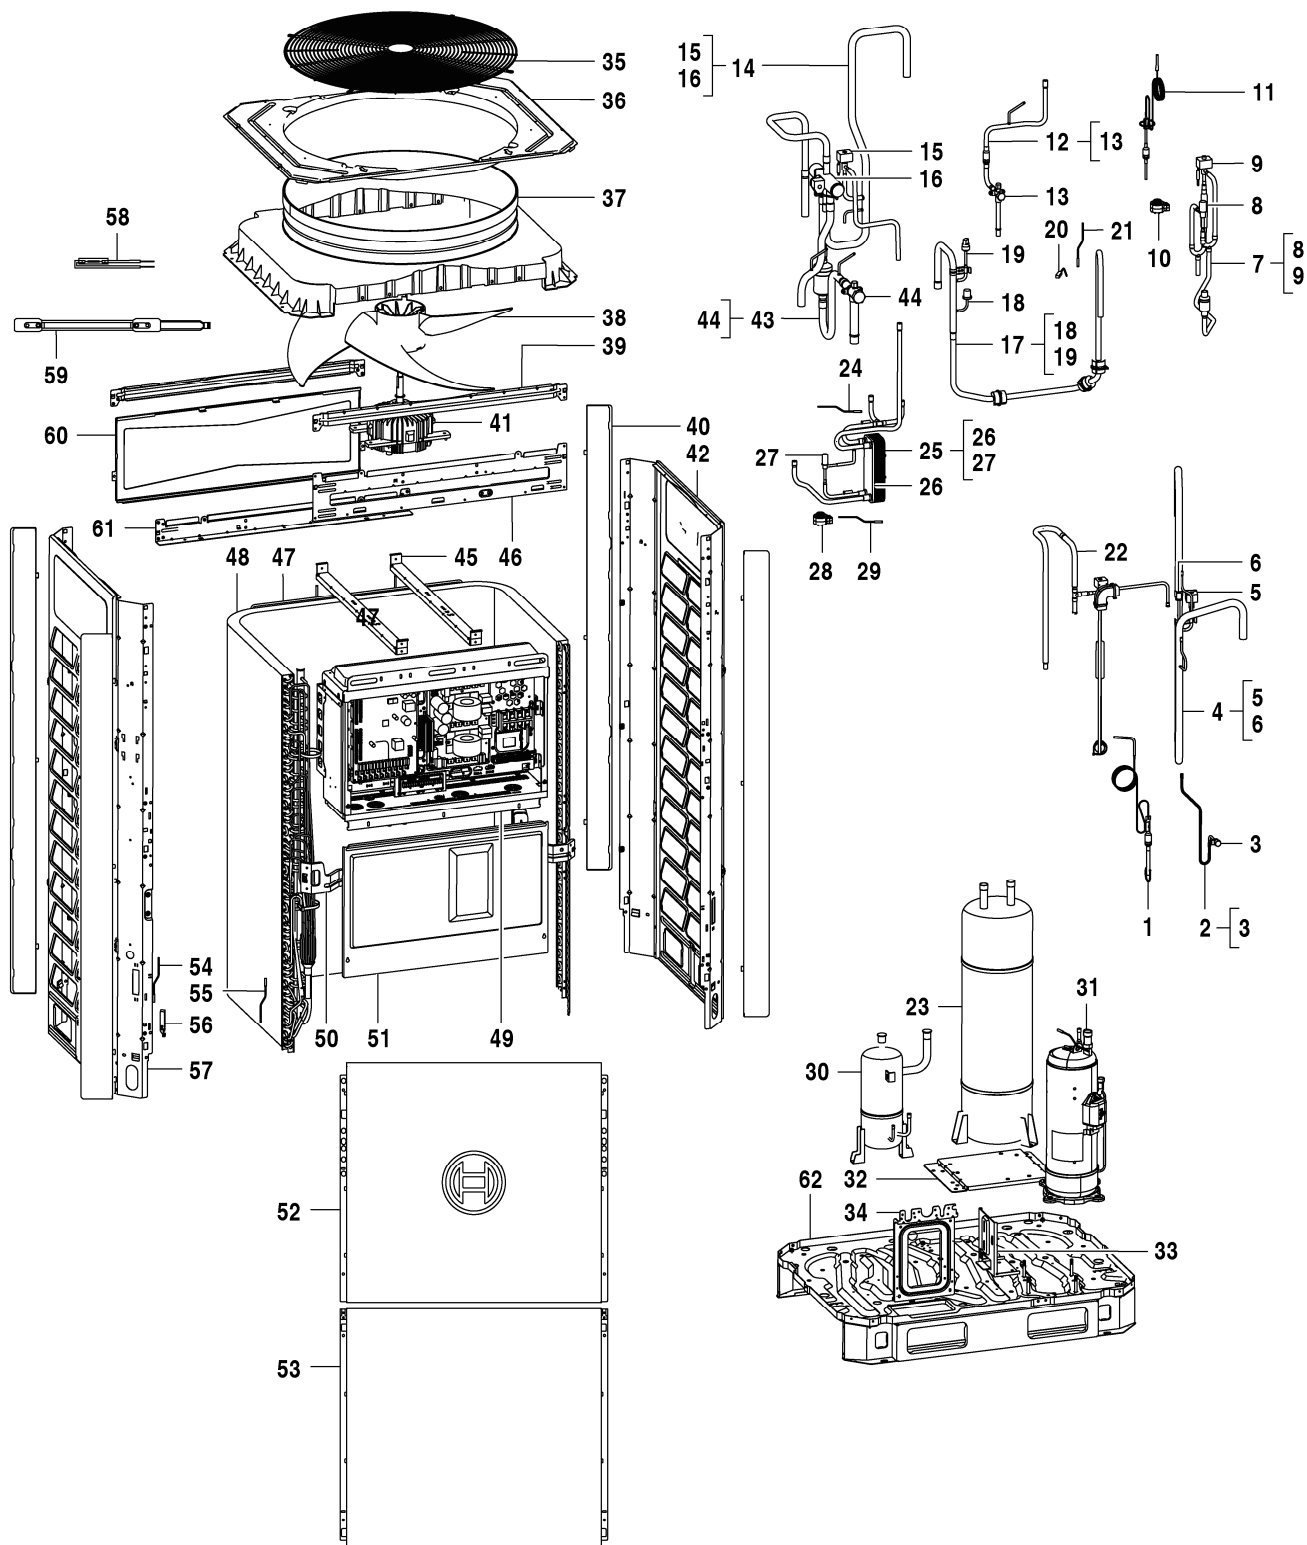



8738894931.aa.RO

AF5300A 25-33-3

AF5300A 25-90

1
A

  Spare parts list

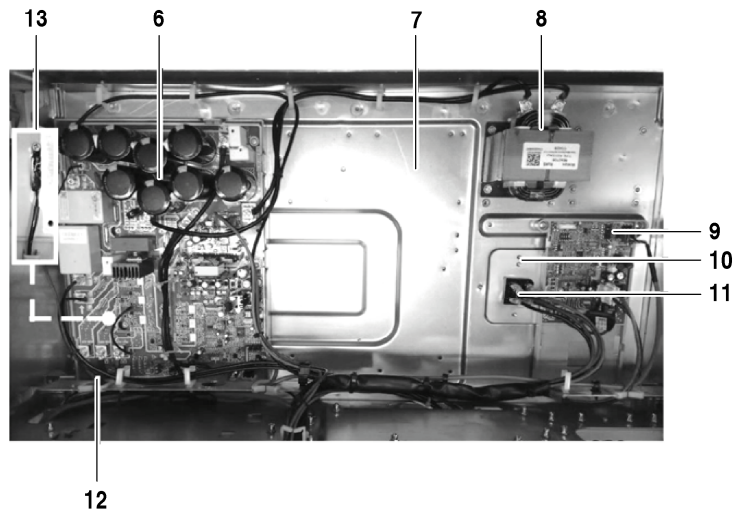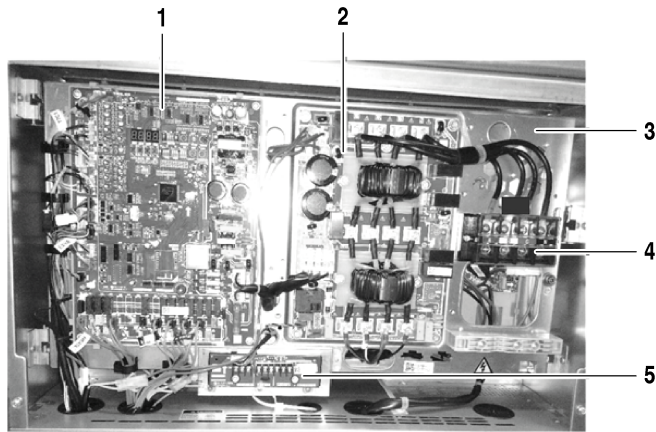


8738894932.aa.RO

AF5300A 25-33-3 PCB

AF5300A 25-90

1
B

 Spare parts list

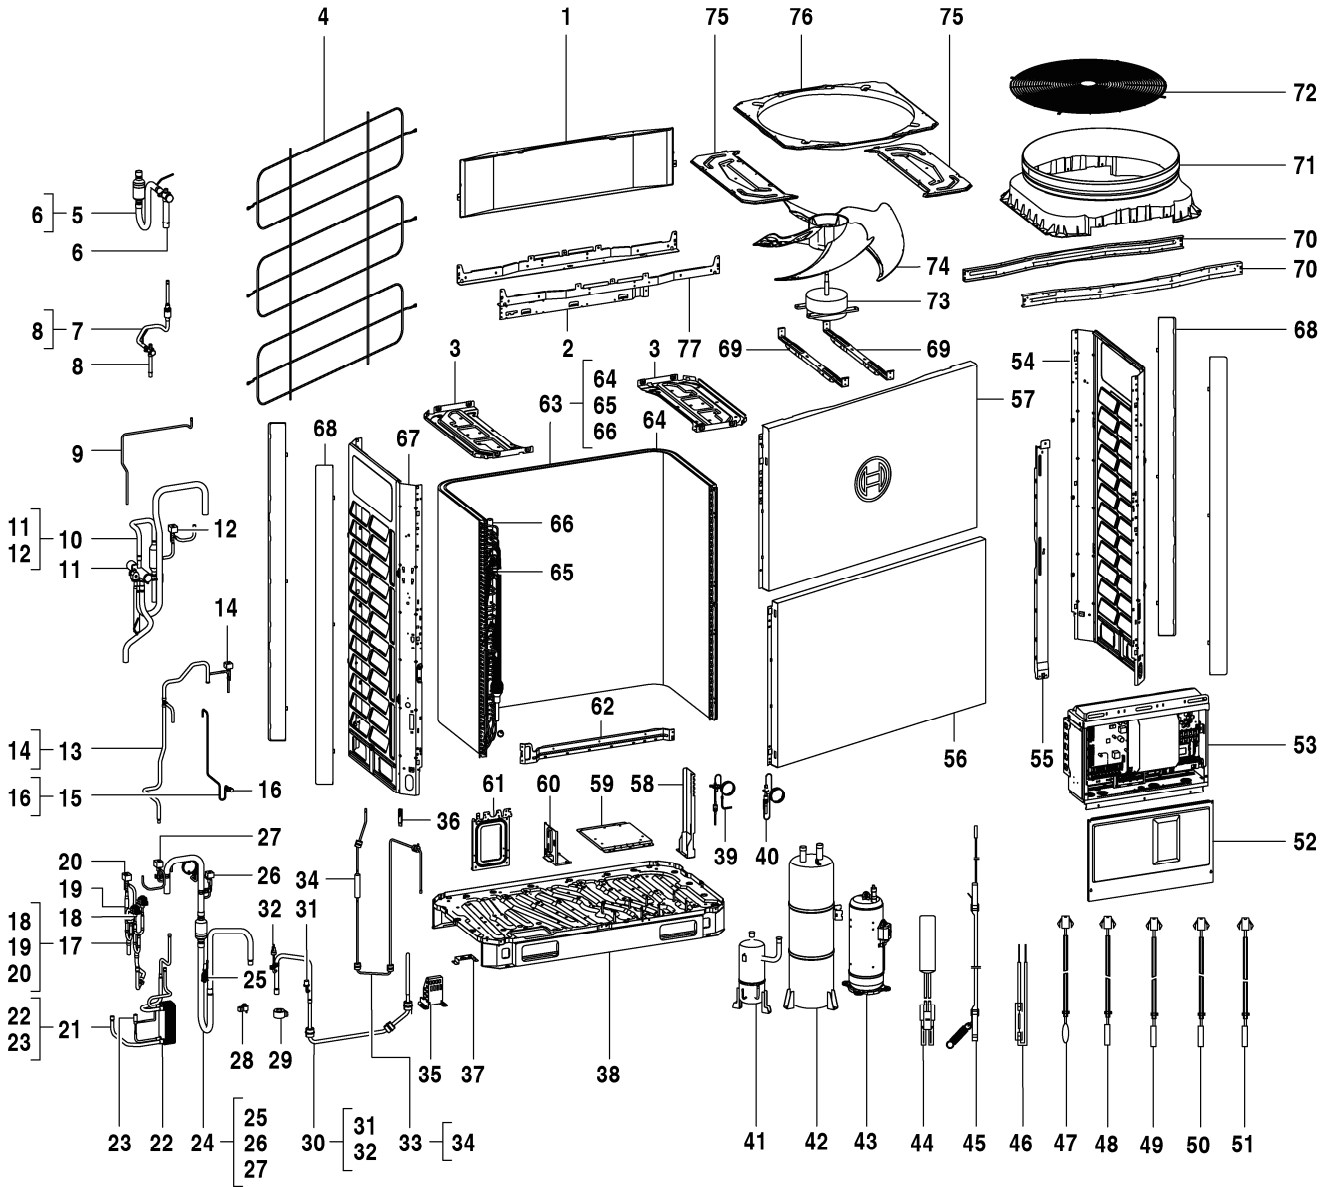

8738894933.aa.RO



AF5300A 40-50-3

AF5300A 25-90

2
A

Pos	Description	Ordering no.													Remarks		
			AF5300A 40-3	AF5300A 45-3	AF5300A 50-3												
1	Panel, rear	8 733 501 612	■	■	■												
2	Beam of motor	8 733 501 223	■	■	■												
3	Plate for sealing	8 733 501 627	■	■	■												
4	Rear grille	7 739 836 543	■	■	■												
5	Low pressure valve assembly	8 733 501 561	■	■	■												
6	Low pressure valve assembly	7 739 836 567	■	■	■												
7	High pressure valve assembly	8 733 501 536	■	■	■												
8	Low pressure valve assembly	7 739 836 569	■	■	■												
9	Connecting pipe assembly	8 733 501 298	■	■	■												
10	4-way valve assembly	8 733 501 194	■	■													
10	4-way valve assembly	8 733 501 195			■												
11	1-way solenoid valve assembly	8 733 501 182	■	■	■												
12	4-way valve assembly	8 733 501 204	■	■	■												
13	Connecting pipe assembly	8 733 501 300	■	■	■												
14	1-way solenoid valve assembly	8 733 501 182	■	■	■												
15	Meter connector	8 733 501 571	■	■	■												
16	Meter connector	7 739 836 503	■	■	■												
17	Electronic expansion valve assembly	8 733 501 357	■	■	■												
18	EXV valve body	8 733 501 503	■	■	■												
19	1-way valve	7 739 830 817	■	■	■												
20	1-way solenoid valve assembly	7 739 836 500	■	■	■												
21	Plate type heat exchanger	8 733 501 633	■	■	■												
22	Plate type heat exchanger	8 733 501 629	■	■	■												
23	EXV valve body	7 739 831 062	■	■	■												
24	Suction pipe assembly	8 733 501 688	■	■	■												
25	Low pressure switch	7 739 831 057	■	■	■												
26	1-way solenoid valve assembly	8 733 501 182	■	■	■												
27	1-way solenoid valve assembly	7 739 836 492	■	■	■												
28	EXV valve coil	7 739 831 043	■	■	■												
29	EXV valve coil	8 733 501 506	■	■	■												
30	Discharge pipe assembly	8 733 501 331	■	■	■												
31	High pressure switch	8 733 501 534	■	■	■												
32	Pressure sensor	8 733 501 637	■	■	■												
33	Spray pipe assembly	8 733 501 682	■	■	■												
34	Accumulator	8 733 501 207	■	■	■												
35	Supporter	8 733 501 708	■	■	■												
36	Temperature sensor clip	7 739 830 831	■	■	■												
37	Supporter	8 733 501 701	■	■	■												
38	Chassis assembly	8 733 501 266	■	■	■												
39	Oil balance pipe	8 733 501 590	■	■	■												
40	Oil return pipe	8 733 501 593	■	■	■												
41	Oil separator	7 739 830 828	■	■	■												
42	Gas-liquid separator	8 733 501 531	■	■	■												
43	DC inverter scroll compressor	8 733 501 327	■	■	■												
44	Discharge temperature sensor	7 739 831 012	■	■	■												
45	Crankcase electric heater	8 733 501 326	■	■	■												
46	Communication wires	7 739 831 389	■	■	■												
47	Outdoor temperature sensor	8 733 501 655	■	■	■												
48	Discharge temperature sensor	8 733 501 334	■	■	■												
49	Pipe temperature sensor	8 733 501 620	■	■	■												
50	Pipe temperature sensor	8 733 501 619	■	■	■												
51	Pipe temperature sensor	8 733 501 623	■	■	■												
AF5300A 25-90												AF5300A 40-50-3					2A

  Spare parts list

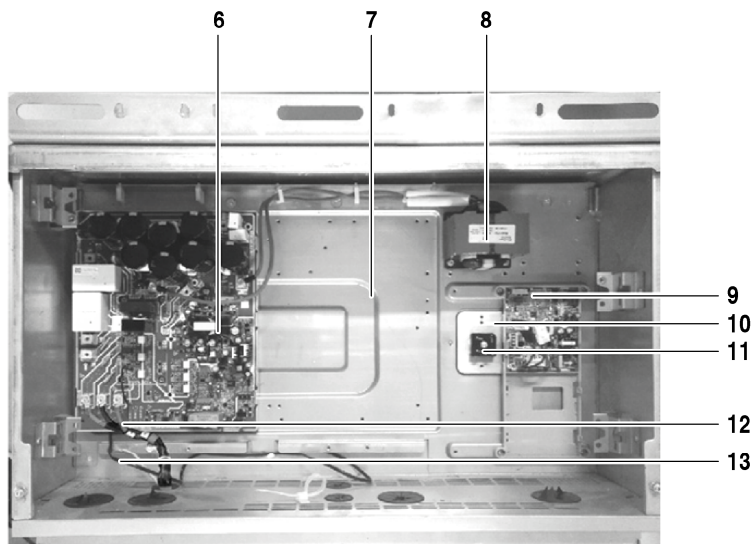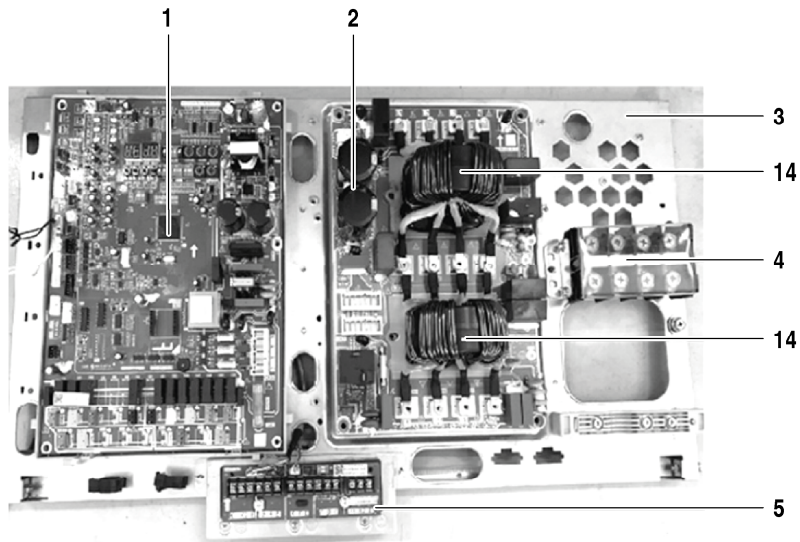


8738894934.aa.RO

AF5300A 40-50-3 PCB

AF5300A 25-90

2
B

 Spare parts list

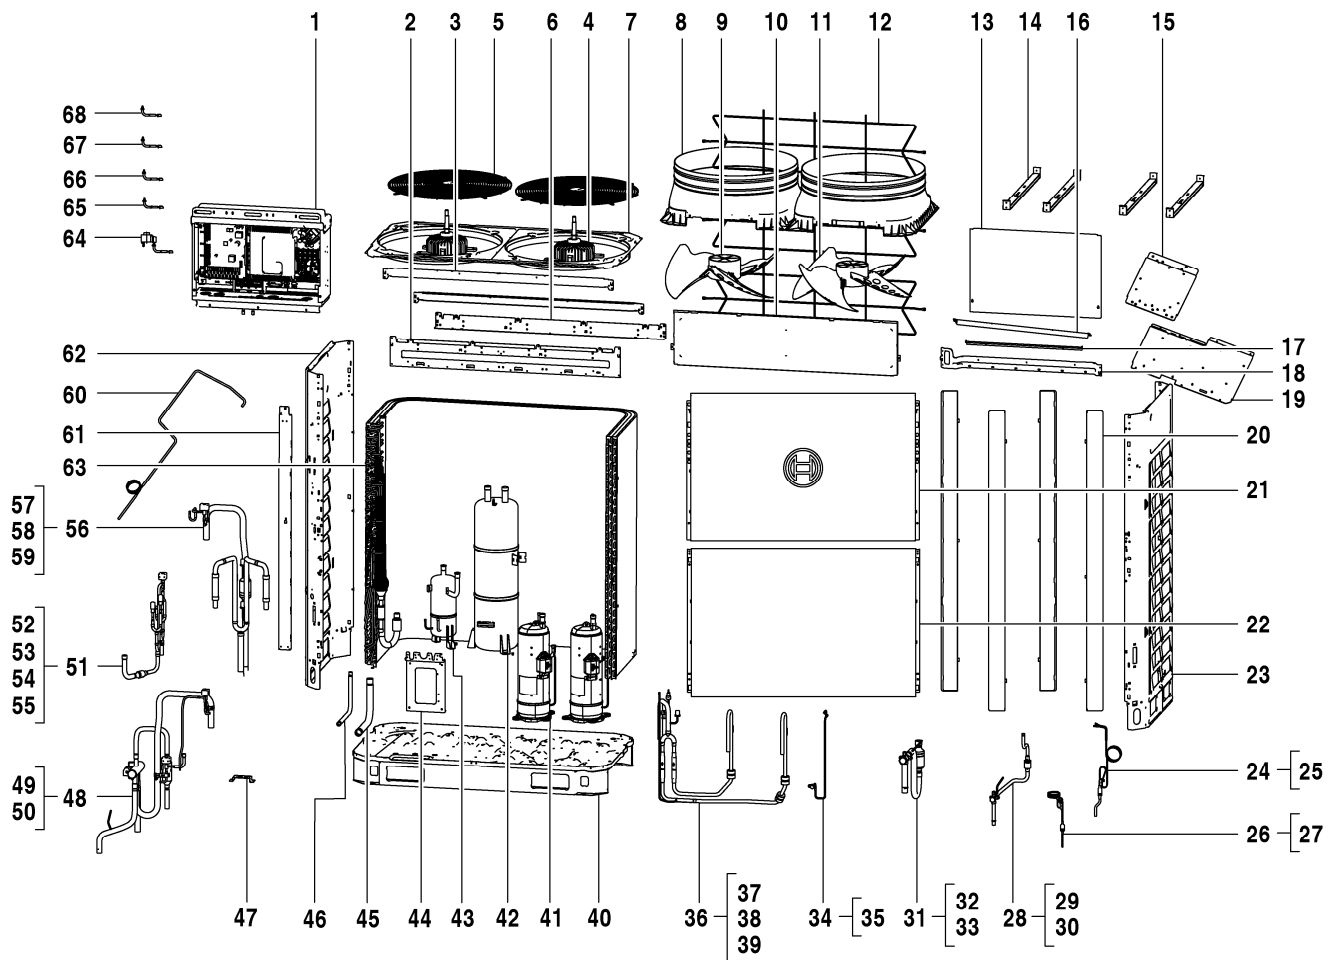


8738894935.aa.RO

AF5300A 56-62-3

AF5300A 25-90

3
A

 Spare parts list

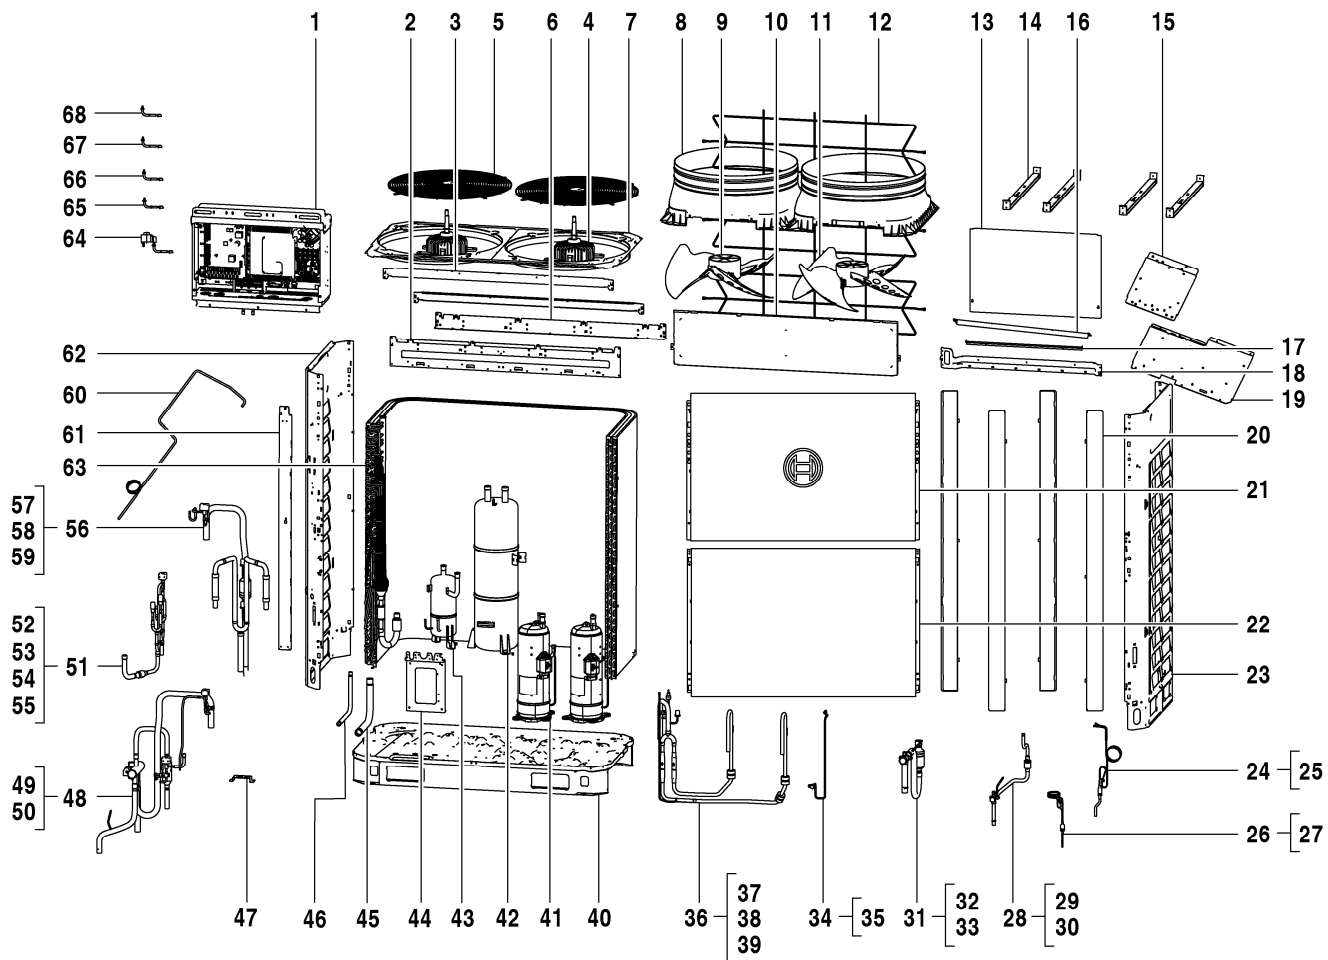



8738894935.aa.RO

AF5300A 56-62-3

AF5300A 25-90

3
A

  Spare parts list

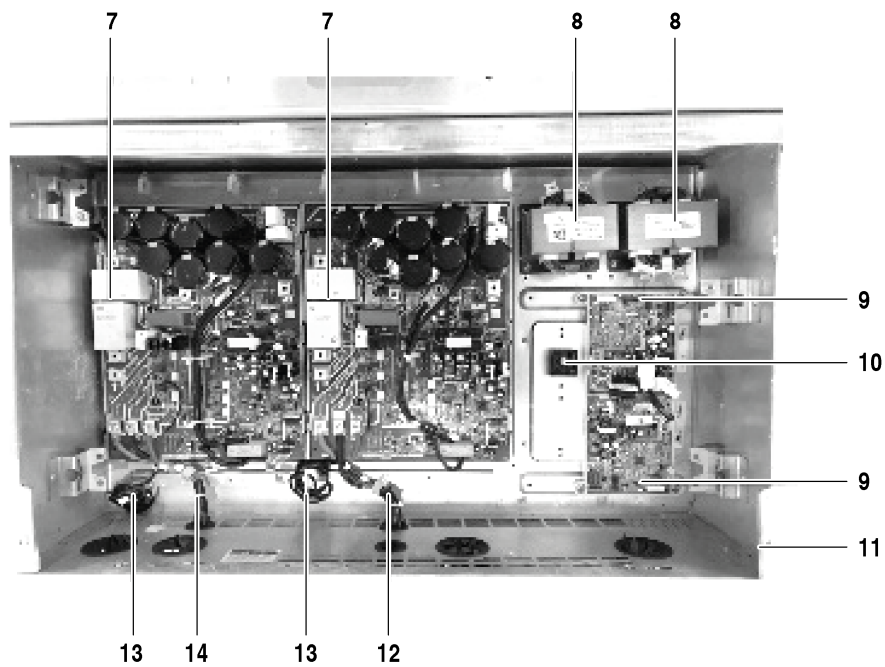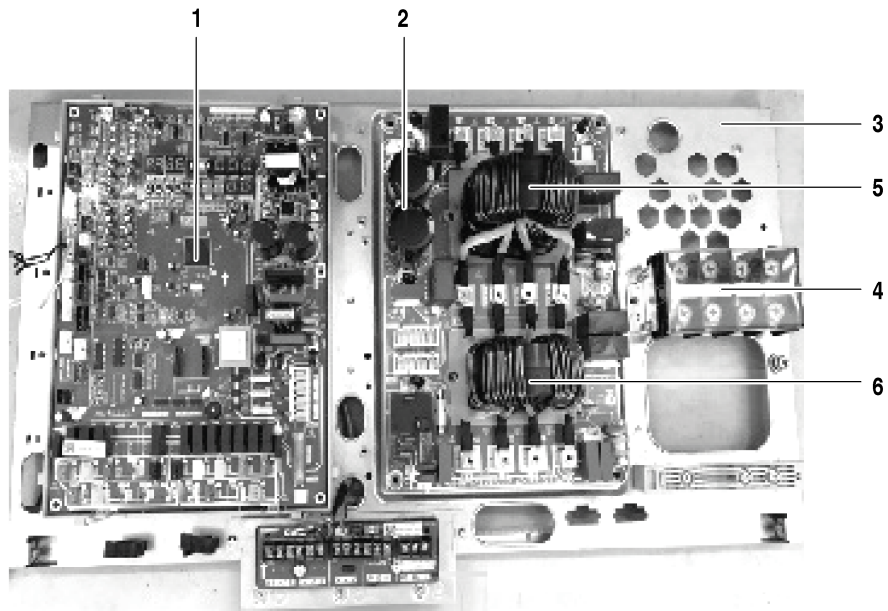


8738894936.aa.RO

AF5300A 56-62-3 PCB

AF5300A 25-90

3
B

 Spare parts list

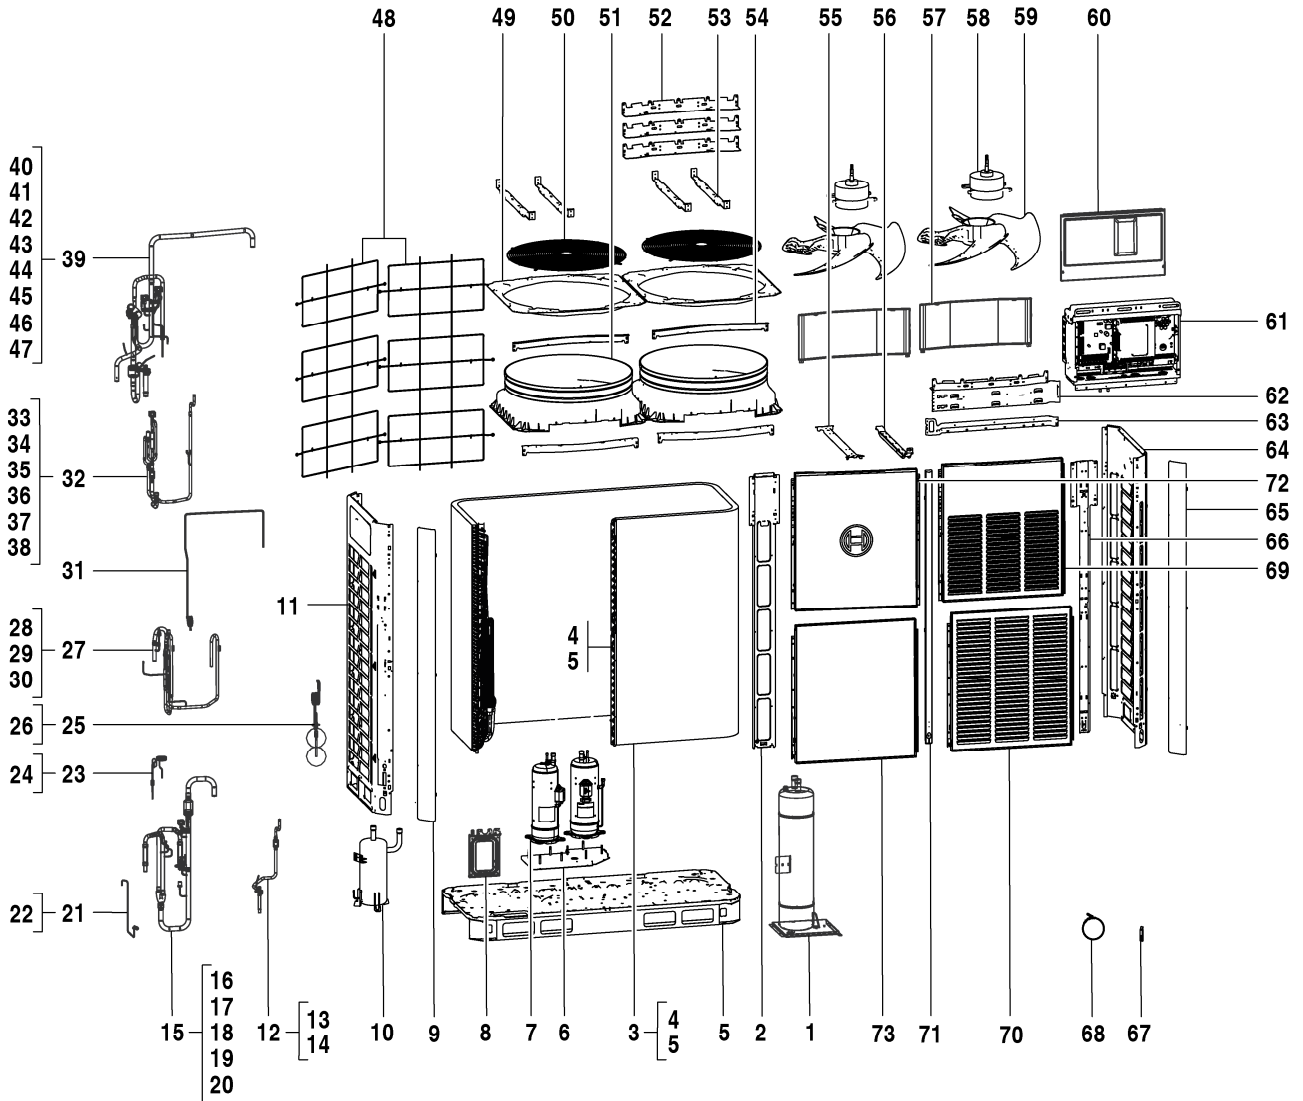


8738894937.aa.RO

AF5300A 67-3

AF5300A 25-90

4
A

 Spare parts list

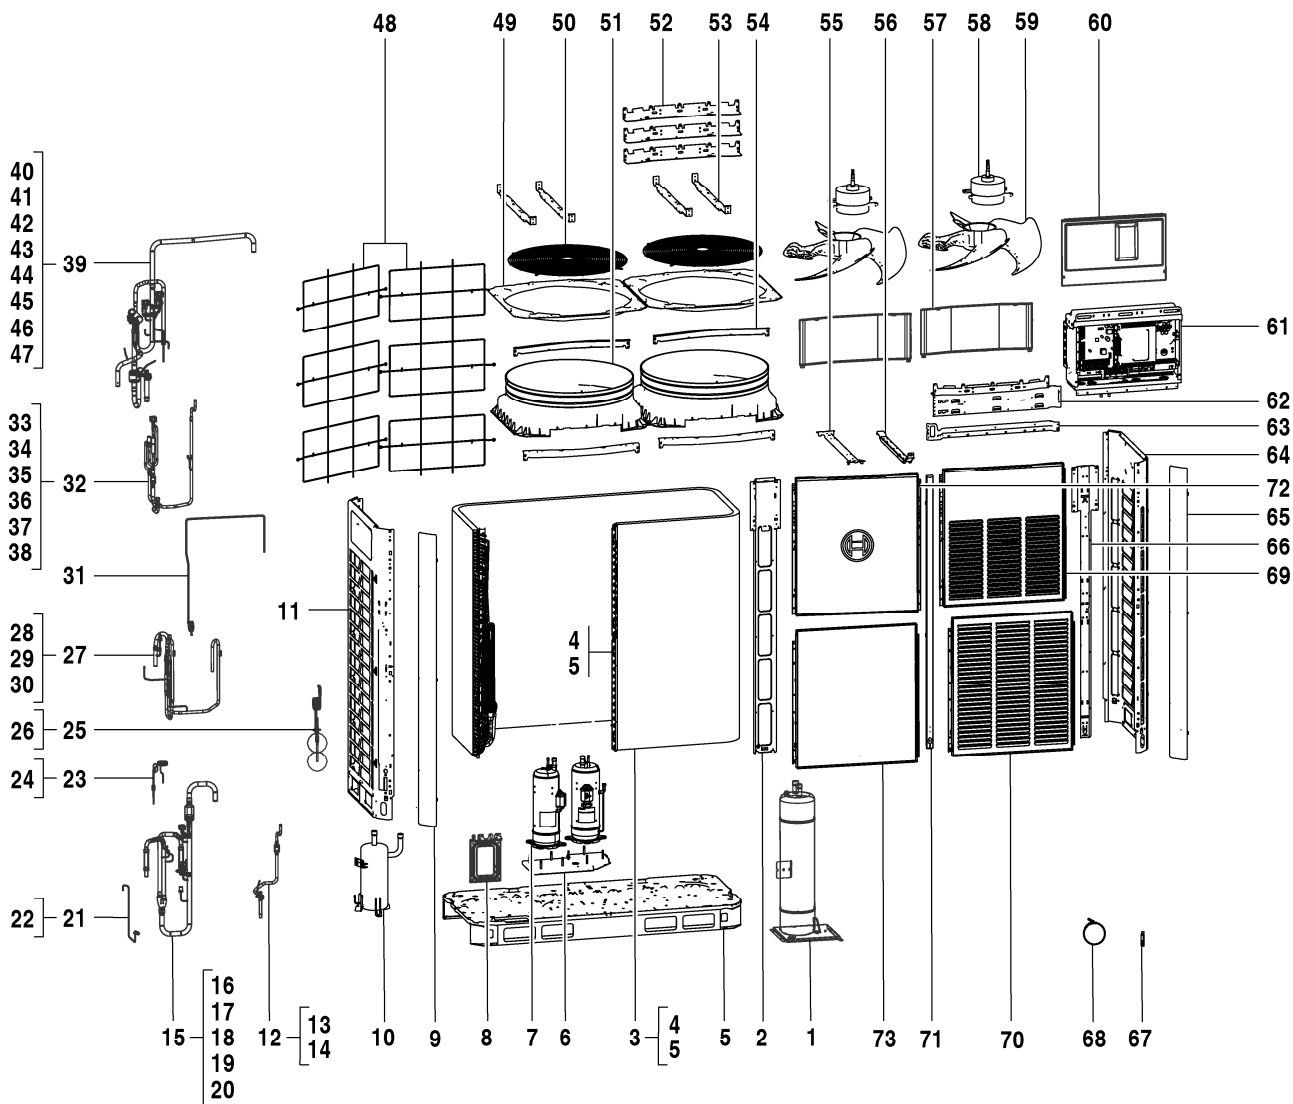




8738894937.aa.RO

AF5300A 67-3

AF5300A 25-90

4
A

   Spare parts list

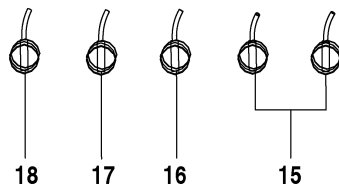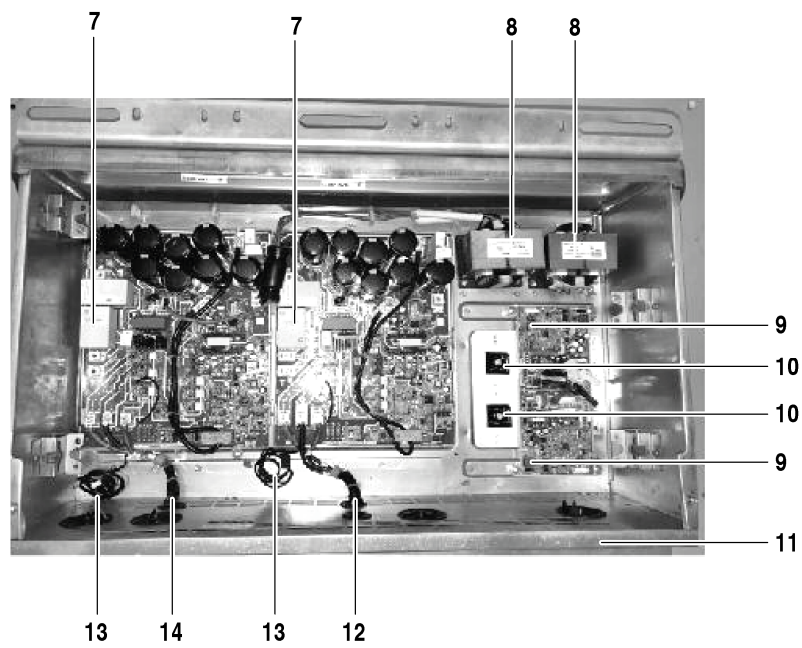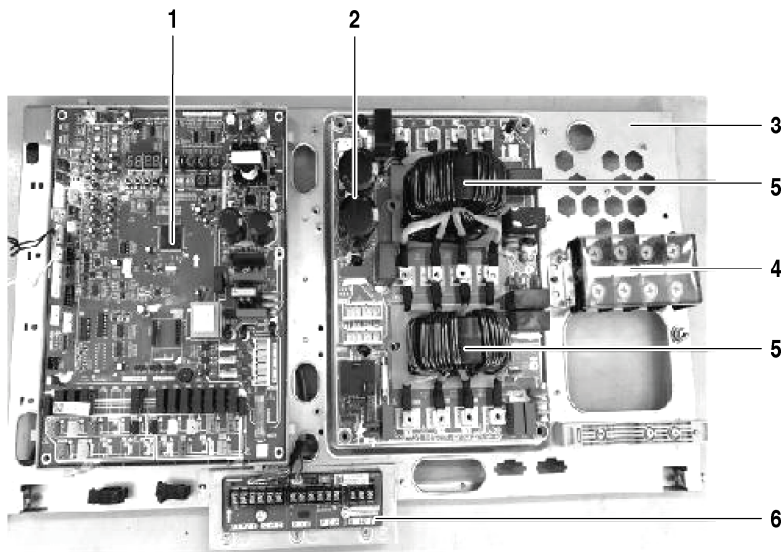


8738894938.aa.RO

AF5300A 67-3 PCB

AF5300A 25-90

4
B

 Spare parts list

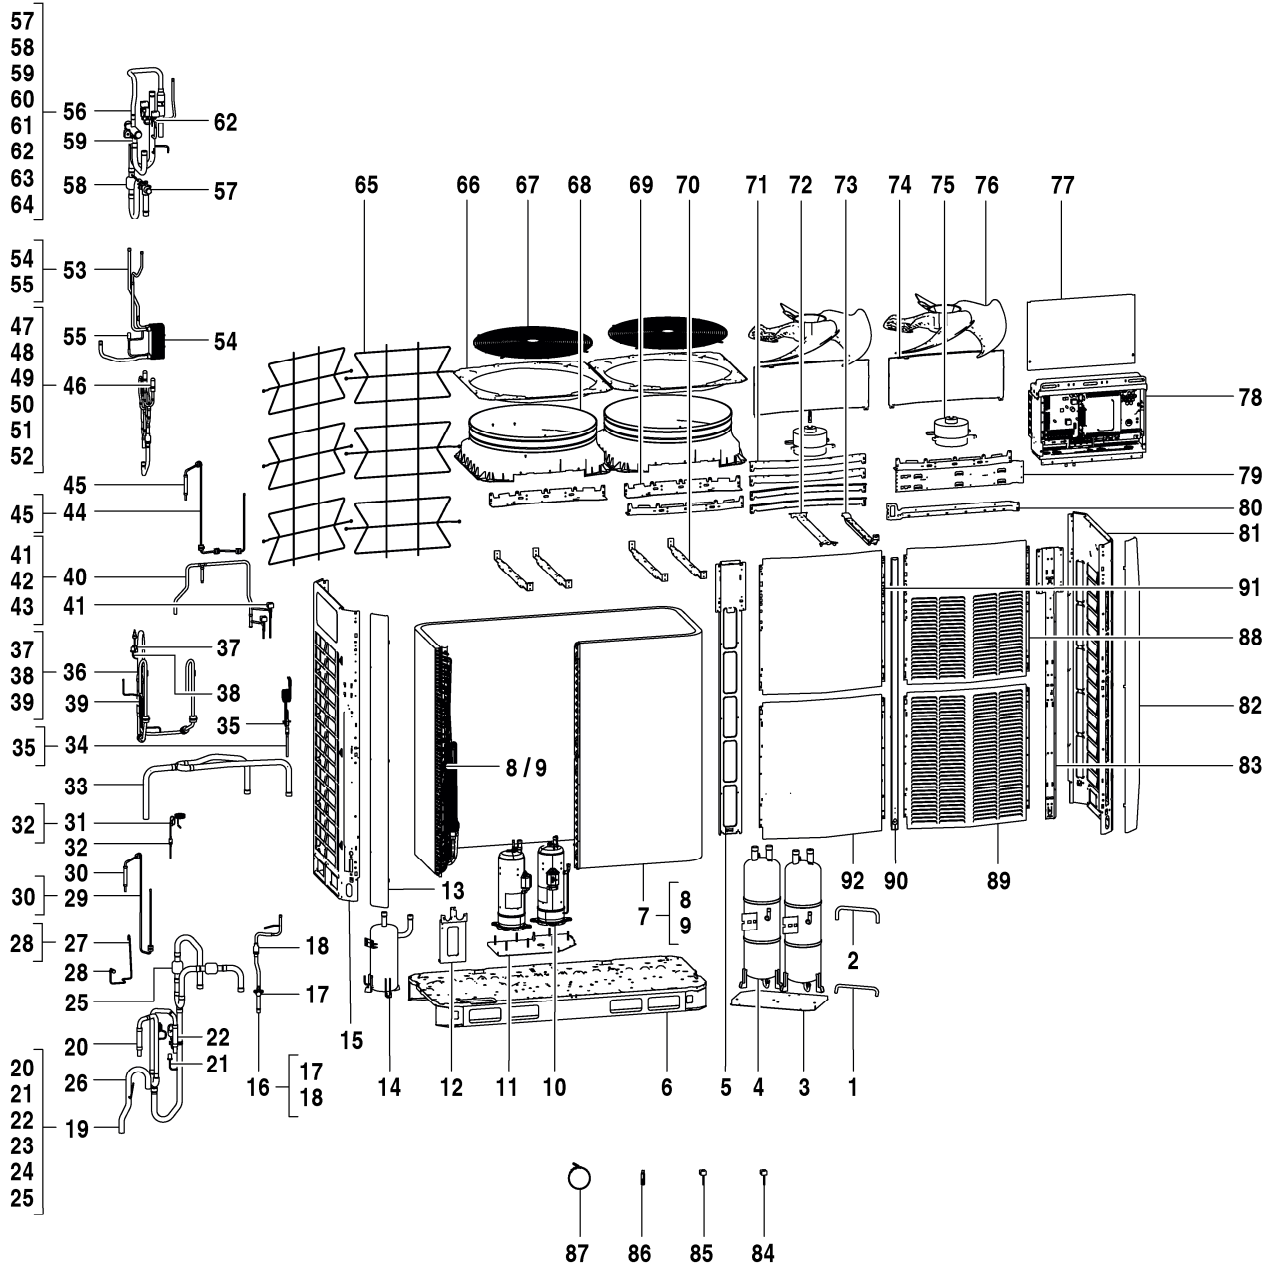


8738894939.aa.RO

AF5300A 73-79-3

AF5300A 25-90

5
A

 Spare parts list

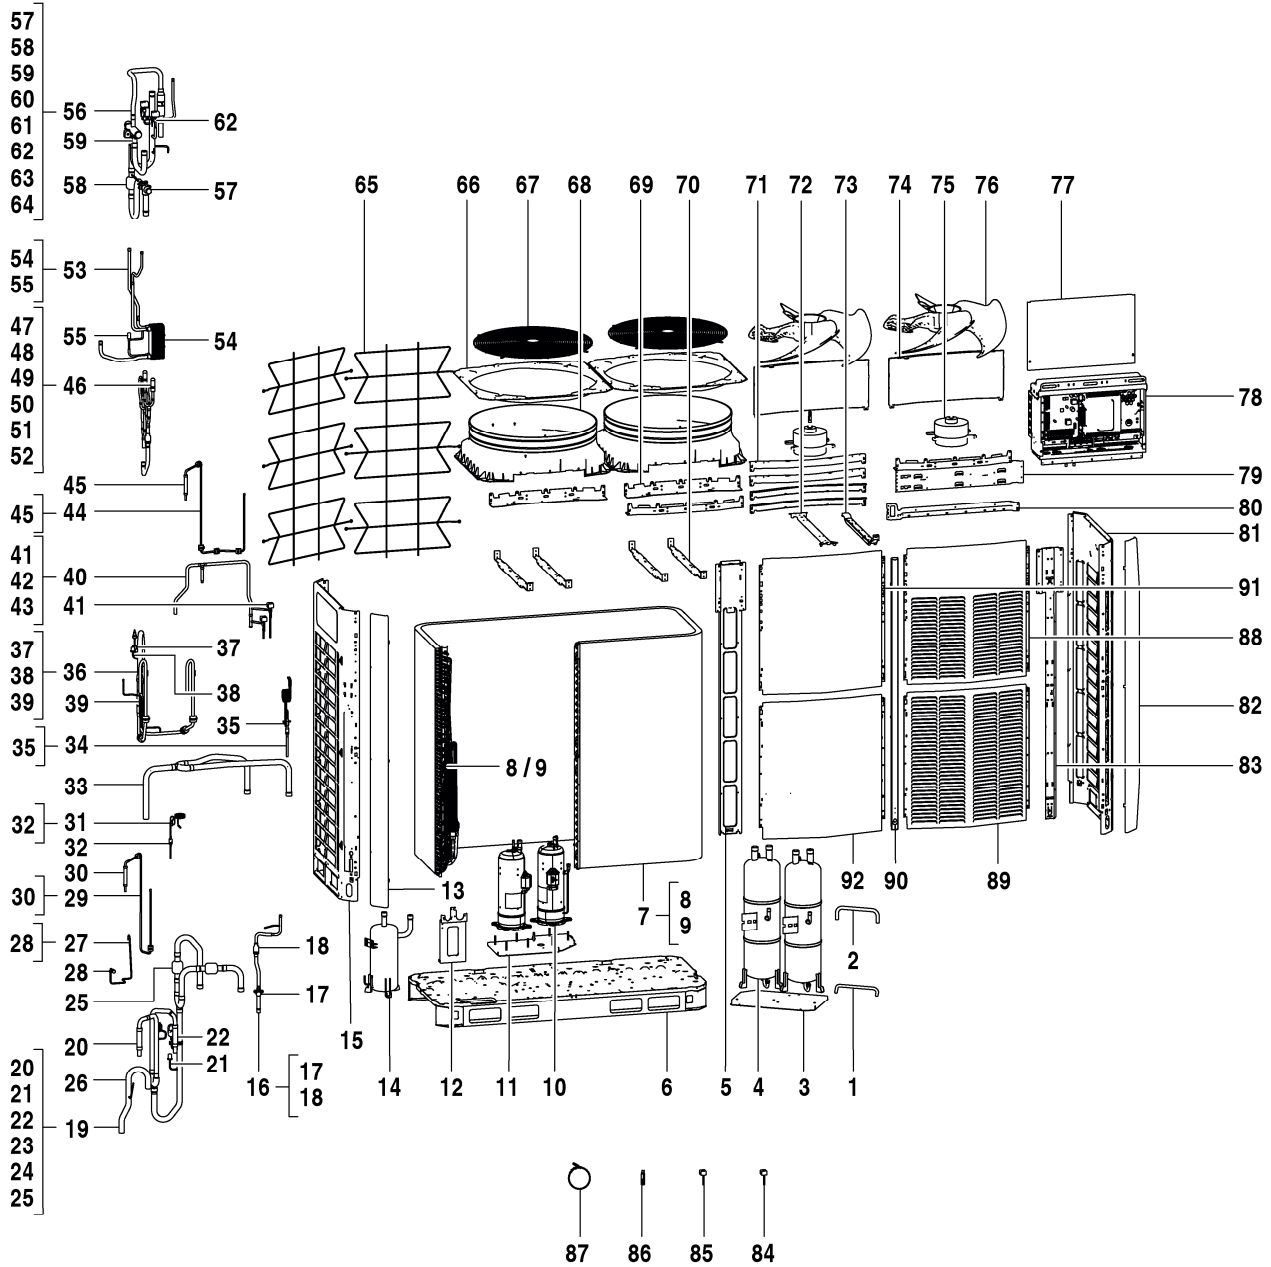




8738894939.aa.RO

AF5300A 73-79-3

AF5300A 25-90

5
A

   Spare parts list

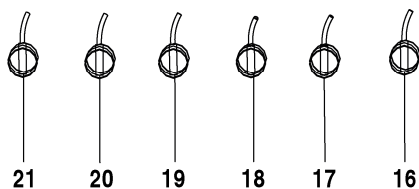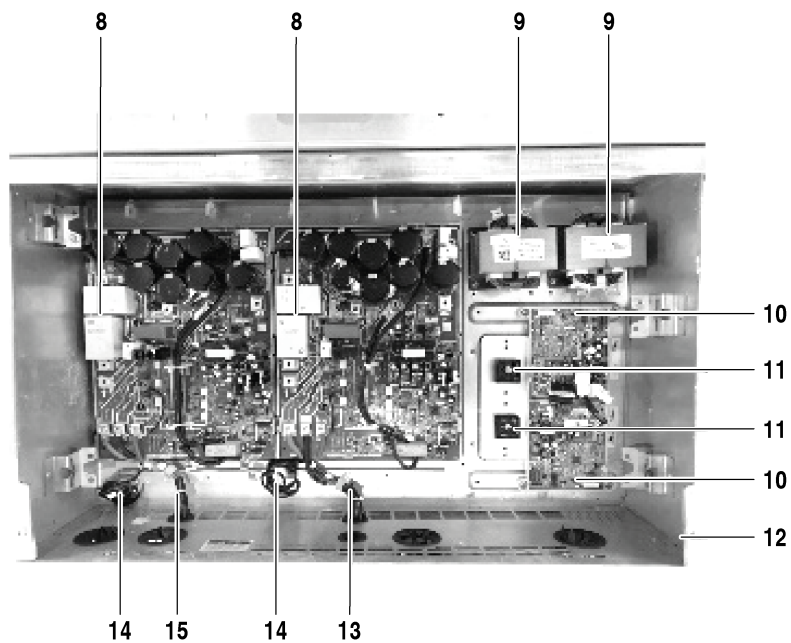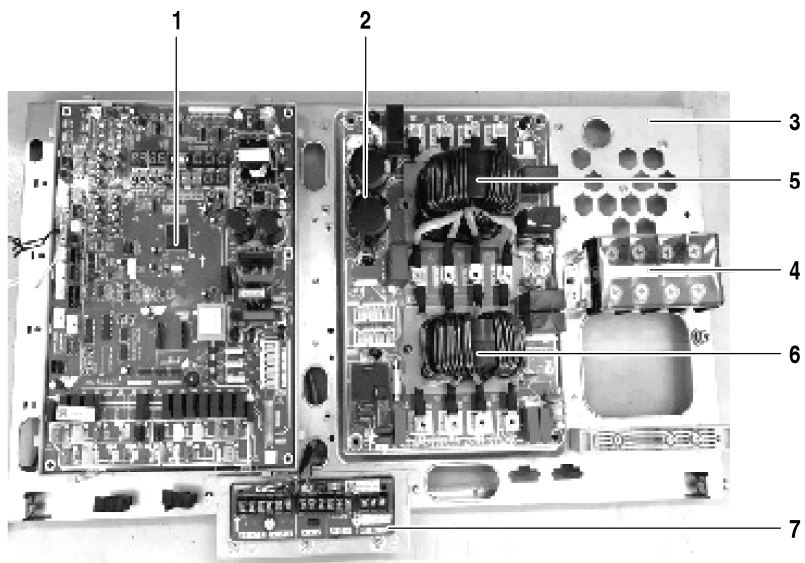


8738894940.aa.RO

5
B

AF5300A 73-79-3 PCB

AF5300A 25-90

 Spare parts list

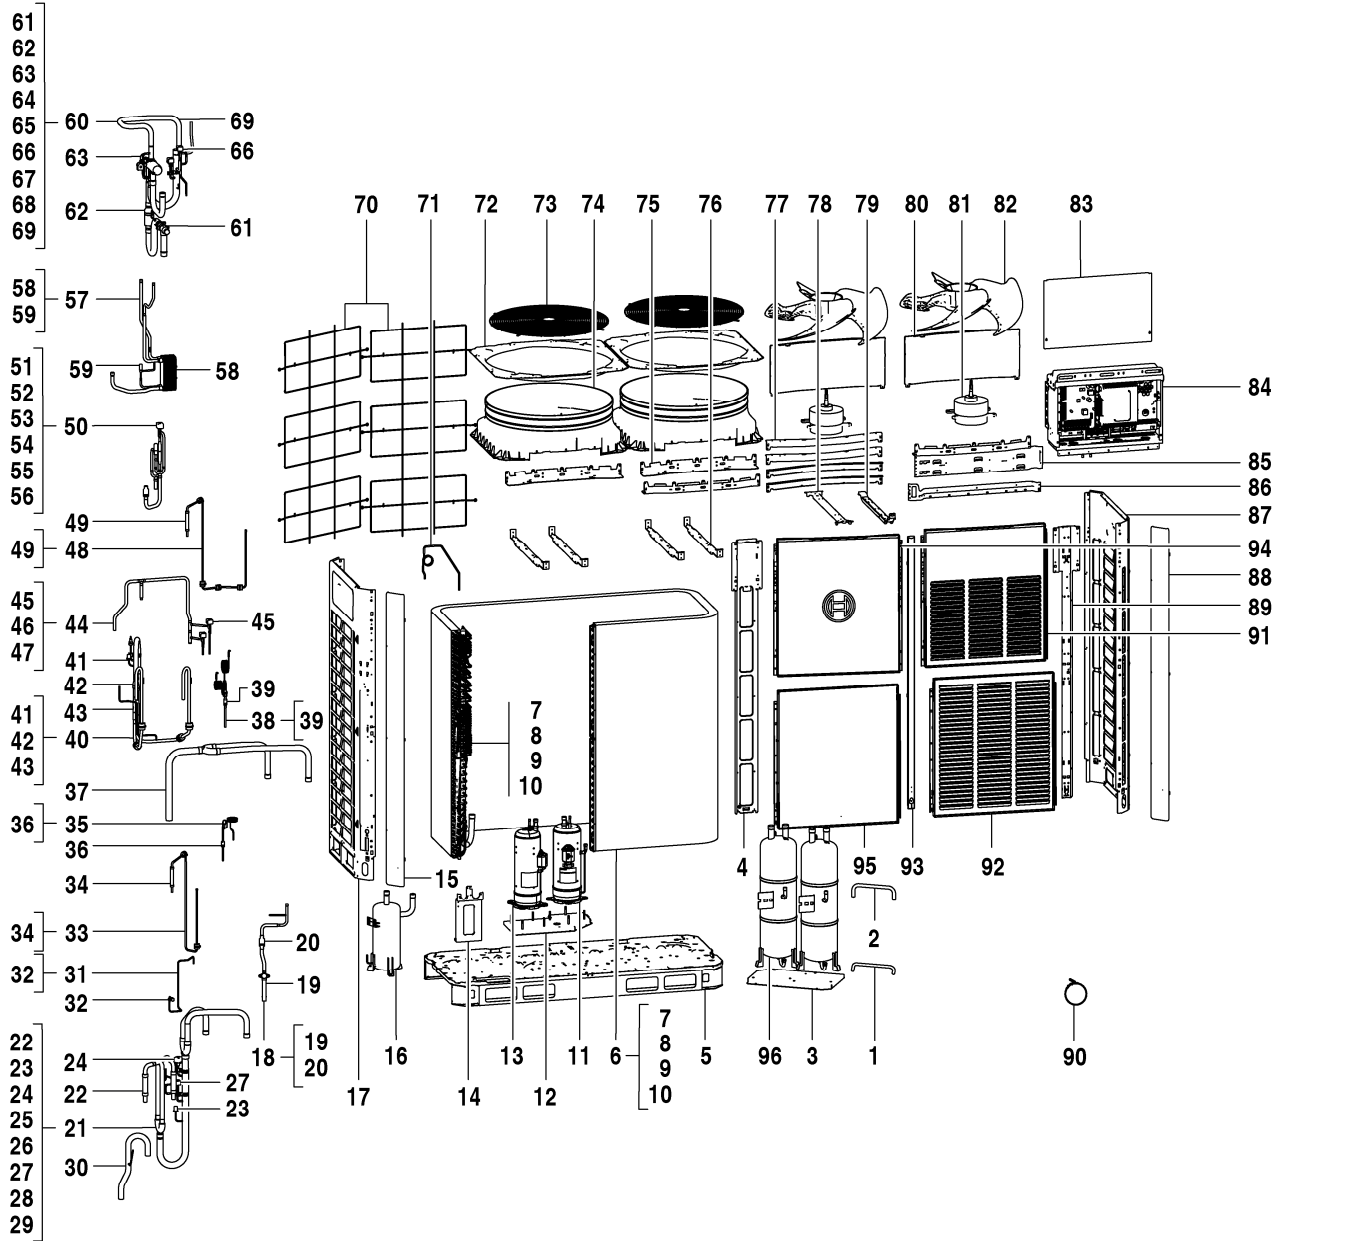


8738894941.aa.RO

AF5300A 85-90-3

AF5300A 25-90

6
A

 Spare parts list

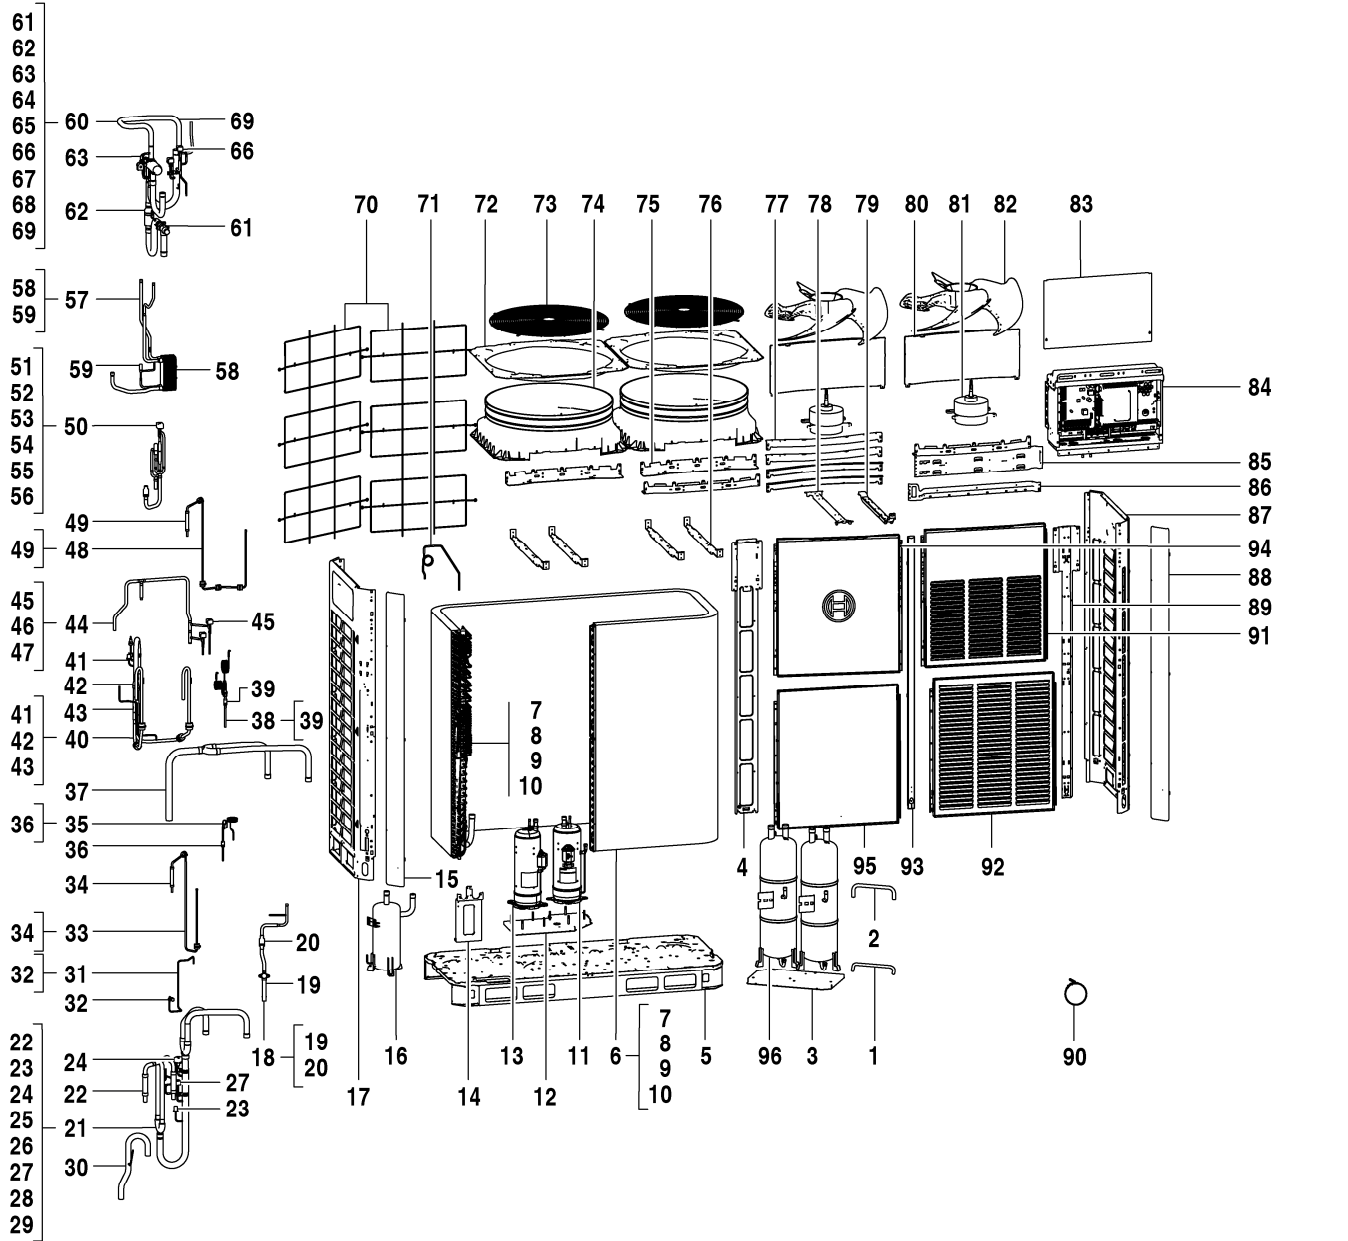




8738894941.aa.RO

AF5300A 85-90-3

AF5300A 25-90

6
A

   Spare parts list

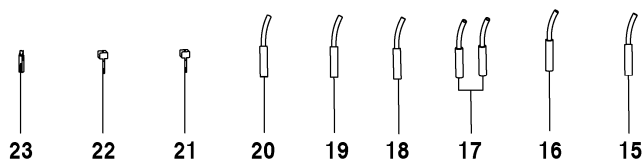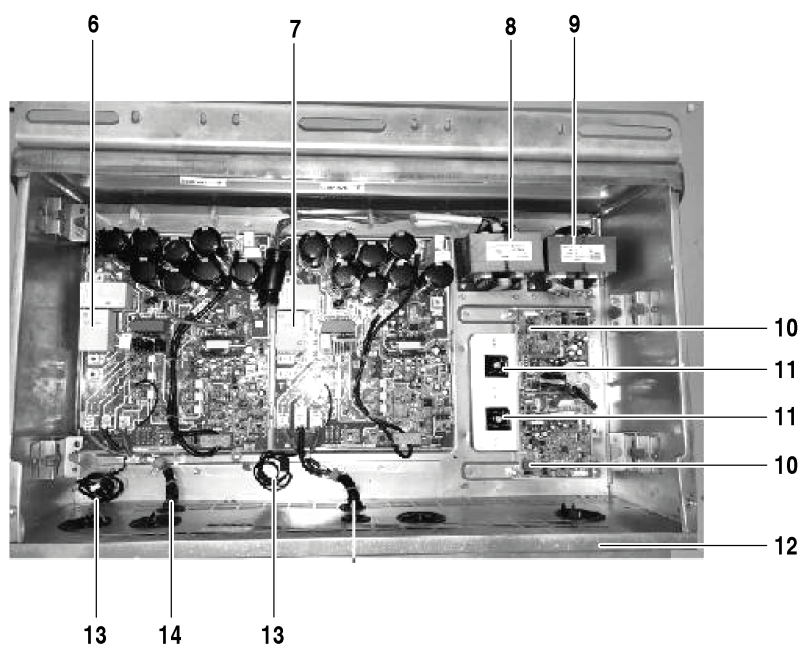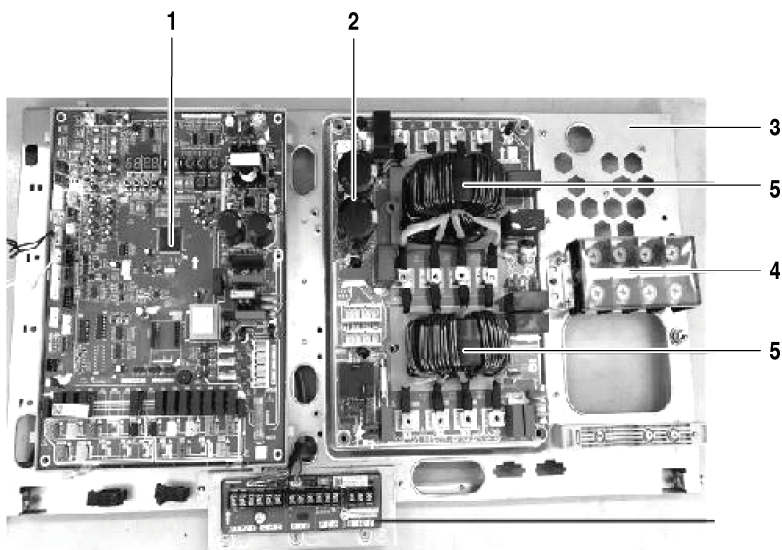

8738894942.aa.RO

6
B

AF5300A 85-90-3 PCB

AF5300A 25-90



BOSCH

Bosch Thermotechnik GmbH
Junkersstr. 20-24
D-73249 Wernau / Germany